


HOW TO CONDITION A COOLER FOR VACCINE TRANSPORT

COMPLETE THESE 3 EASY STEPS:

- 1) Arrange vaccine transport cooler packing materials and wait approximately 30 minutes for temperatures to stabilize between $+2.0^{\circ}\text{C}$ to $+8.0^{\circ}\text{C}$.
- 2) Clear the thermometer's memory.
- 3) Proceed to your vaccine pickup location. Health Unit staff will verify that the vaccine transport cooler is within $+2.0^{\circ}\text{C}$ to $+8.0^{\circ}\text{C}$ before releasing your vaccine order.

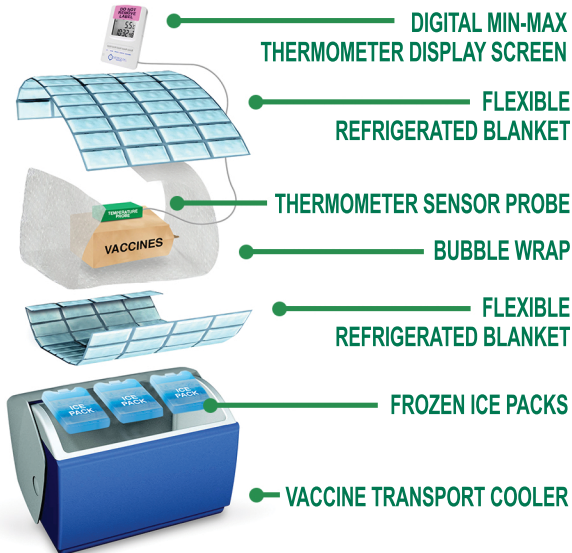

Reminder: Check your cooler's temperature upon arrival at your office. If the temperature is below $+2.0^{\circ}\text{C}$ or above $+8.0^{\circ}\text{C}$, immediately contact the Vaccine Preventable Disease Team at 519-663-5317.